


# DMX/USB/MIDI development board

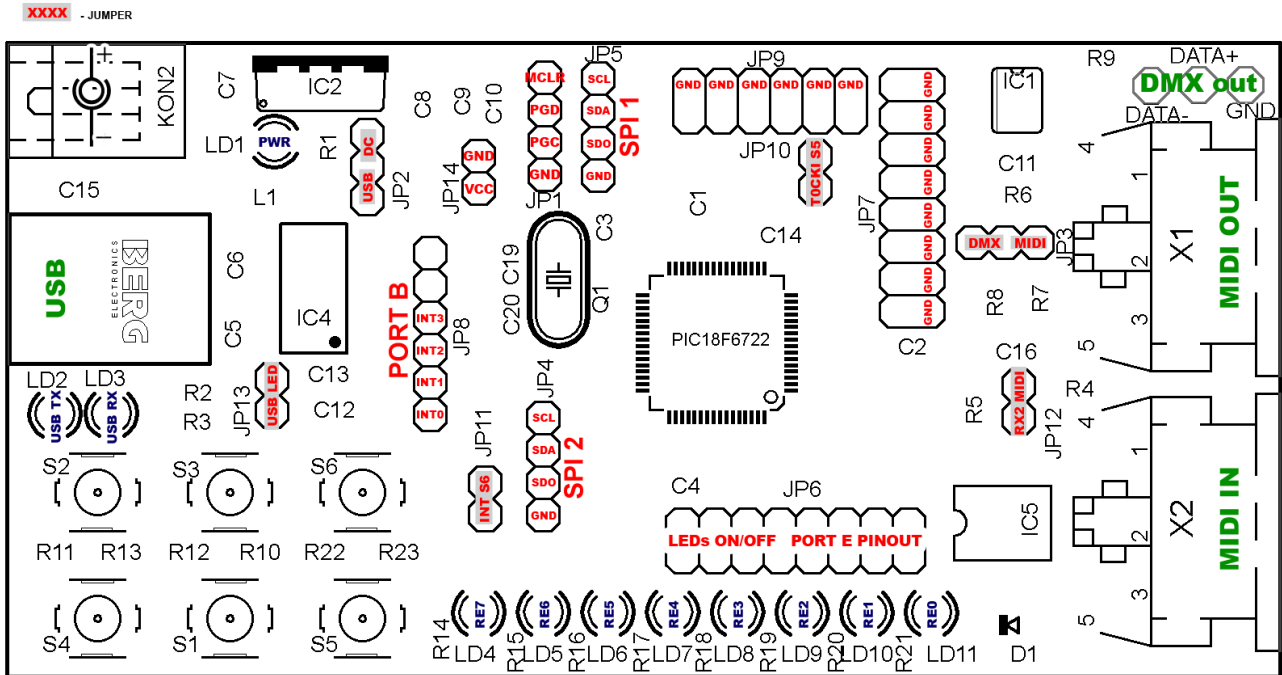

Obrázek 1: Popis desky

C1	10nF	D1	1N4148SMD	R1	1K5
C2	10nF	IC1	MAX481CSA	R2	1K5
C3	10nF	IC2	7805TV	R3	1K5
C4	10nF	IC4	FT232RL	R4	220R
C5	10nF	IC5	CNY17	R5	2K4
C6	10nF	LD1	RED	R6	220R
C7	100nF	LD2	green	R7	220R
C8		LD3	Yellow	R8	100R
C9	100nF	Q1	QM10MHZ	R9	120R
C10	10nF			R10	5K6
C11	10nF			R11	5K6
C12	10nF			R12	5K6
C13	100nF			R13	5K6
C14	10nF			R14	1K5
C15	10nF			R15	1K5
C16	10nF			R16	1K5
C19	22pF			R17	1K5
C20	22pF			R18	1K5
				R19	1K5
				R20	1K5
				R21	1K5
				R22	5K6
				R23	5K6